



DC315XX

Contents **DE** Inhalt **FR** Contenu **UK** Inhoud **FI** Sisältö
UK Inhoud **IT** Contenuto **ES** Contenido **PT** Conteúdo
GR Περιεχόμενα **SE** Innehåll



 
x1



x1



x1



x1



x2




x2






x2



x1

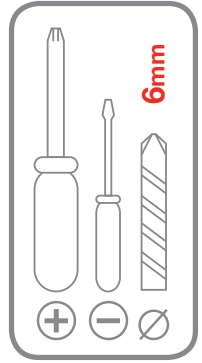


Getting started **DE** Erste Schritte **FR** Démarrage **UK** Aan de slag **FI** Aloitusopas **UK** Kom i gang
IT Operazioni preliminari **ES** Para empezar **PT** Para começar **GR** Πρώτα βήματα **SE** Kom igång

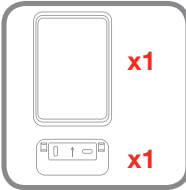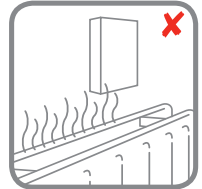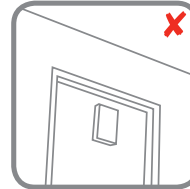


x1



x1

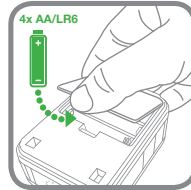

4x AA/LR6

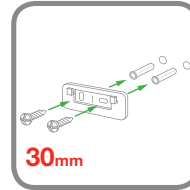


30mm


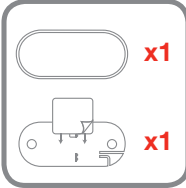
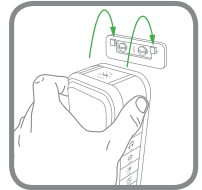


x1



x1

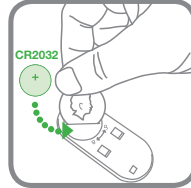

CR2032

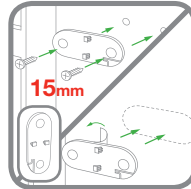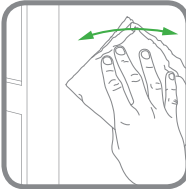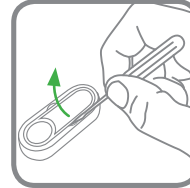






15mm

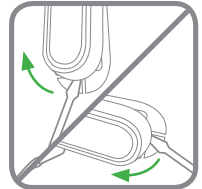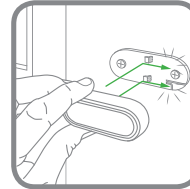


GB Optional features **DE** Optionale Funktionen **FR** Options disponibles **NL** Opties
FI Valinnaiset ominaisuudet **DK** Valgfrie funktioner **IT** Funzionalità opzionali **ES** Opciones disponibles
PT Funções opcionais **GR** Προαιρετικές λειτουργίες **SE** Möjliga funktioner



	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

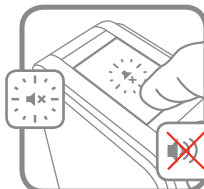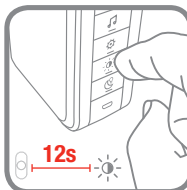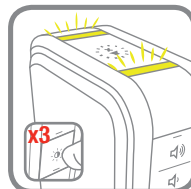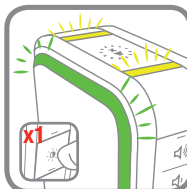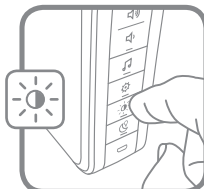

		3Hrs			6Hrs
		9Hrs			12Hrs

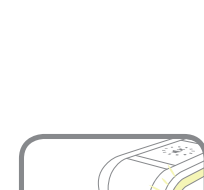

GB Linking **DE** Einlernen **FR** Programmation **NL** Programmeren
FI Vianmääritys **DK** Problemløsning **IT** Risoluzione dei problemi **ES** Solución de problemas
PT Verknüpfung **GR** Προβλήματα **SE** Förbindelse
PT Programação **GR** Ουδέποτε **SE** Länkning



GB Trouble shooting **DE** Fehlerbehebung **FR** Dépannage **NL** Probleemoplossing
FI Vianmääritys **DK** Problemløsning **IT** Risoluzione dei problemi **ES** Solución de problemas
PT Resolução de problemas **GR** Αντιμετώπιση προβλημάτων **SE** Felsökning

livewell.honeywell.com



32304374-001 Rev.A