


Contents **DE** Inhalt **FR** Contenu **NL** Inhoud **F** Sisältö
OK Inhalt **IT** Contenuto **ES** Contenido **PT** Conteúdo
GR Περιεχόμενα **SE** Innehåll

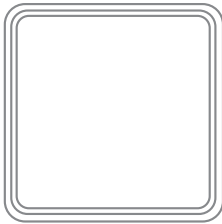

x1



x1



x1



x1



x2



x2




x2















CR2032



x1

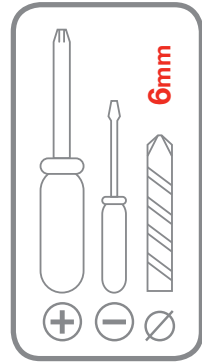










Getting started **DE** Erste Schritte **FR** Démarrage **NL** Aan de slag **F** Aloitusopas **OK** Kom i gang
IT Operazioni preliminari **ES** Para empezar **PT** Para começar **GR** Πρώτα βήματα **SE** Kom igång

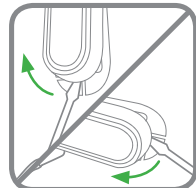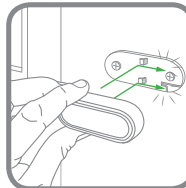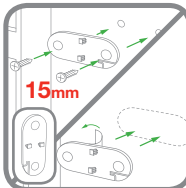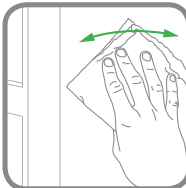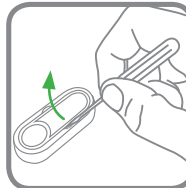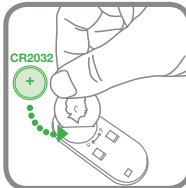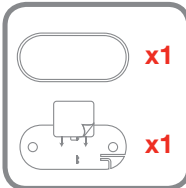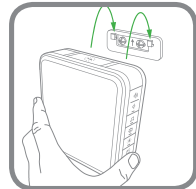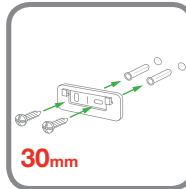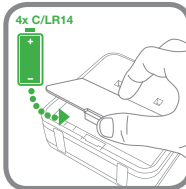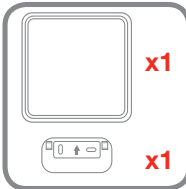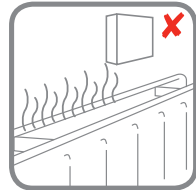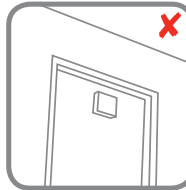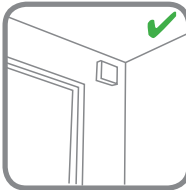

GB Optional features 05 Optionale Funktionen FR Options disponibles 06 Opções disponíveis
 FI Valinnaiset ominaisuudet 07 Valgrie funktioner IT Funzionalità opzionali ES Opciones disponibles
 PT Funções opcionais 08 Προαιρετικές λειτουργίες πρόσθετων 09 Möjliga funktioner



	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
04	•	•					•	•
05	•	•	•	•			•	•
06	•	•	•	•	•	•	•	•

  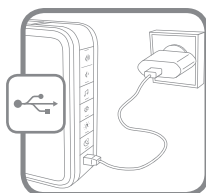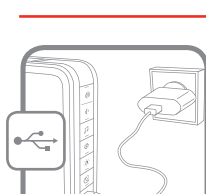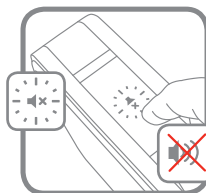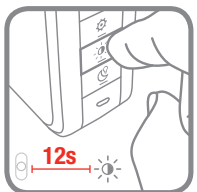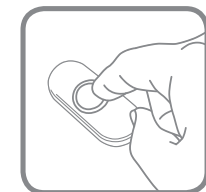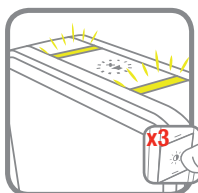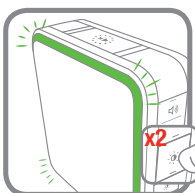

GB Trouble shooting 05 Fehlerbehebung FR Dépannage 06 Probleemoplossing
 FI Vianmääritys 07 Problemløsning IT Risoluzione dei problemi ES Solución de
 problemas PT Resolução de problemas 08 Αντιμετώπιση προβλημάτων 09 Felsökning

livewell.honeywell.com



32304375-001 Rev.A